

















Physical address:
12 Hickory Avenue, Henderson, Waitākere,
Auckland 0650, New Zealand

LEGEND:

TELEPHONE :	
DOUBLE POWER POINT BLUE 7 :	
DOUBLE POWER POINT WHITE 7 :	
DOUBLE POWER POINT RED 7 :	
DOUBLE POWER POINT RED 8 :	
DOUBLE POWER POINT BLUE 8 :	
DOUBLE POWER POINT WHITE 8 :	
LIGHT SWITCH :	
FAN SWITCH BOARD :	
SWITCH BOX	
3 PHASE 32 A	
SINGLE PHASE 20A	
LIGHT SWITCH	
FIRE HOSE	
FIRE ALARM	
FIRE EXTINGUISHER	
FIRE EXIT	
MAINS	



Postal address:
PO Box 1561 Wellesley Street, Auckland 1141 New Zealand
Ph: +64 9 838 1437 Fax +64 9 838 1437

